

How can we get the default settings of ATC-1000

第一步,断开电源,打开铁壳;

Step1,cut off power and then open the shell;

第二步,按住 RJ45边上的按钮不放,然后给 ATC-1000上电;

Step2,press the button near to RJ45 and then power on ATC-1000;

第三步,等待5秒左右,释放按键;

Step3,wait about 5 seconds, release the button;

第四步,重新上电.

Step4,reboot.



Shenzhen ATC Technology Co., Ltd

Room 803, Block B, Building 4, Tian'an Cyber Park, Longgang District,
Shenzhen,China,518172

Tel: +86-755-8345 2531

Fax: +86-755-2899 8985

E-mail: tech@szatc.com

Web-Site: www.szatc.com